

home8

Mini Cube HD Camera (IPC2202)



User Manual

Activation

Note:


1. Power up the Mini Cube HD Camera first.
2. The LED indicator will blink purple and then blink blue.
3. The default Mode is “Internet Mode”.




Activation

With Shuttle/OPU (Internet Mode)


1

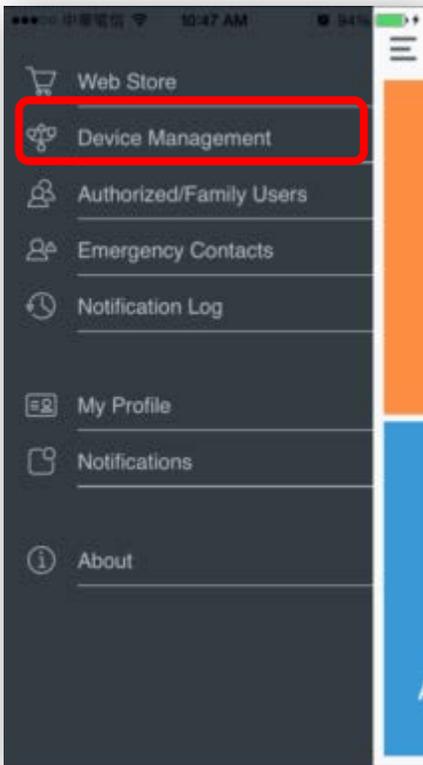

2

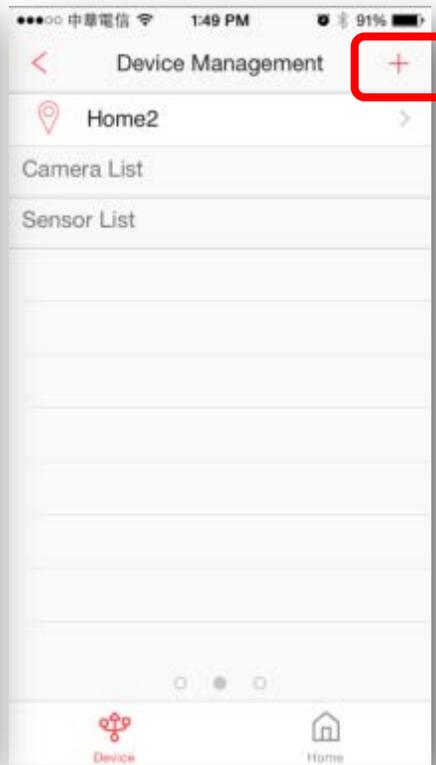

3

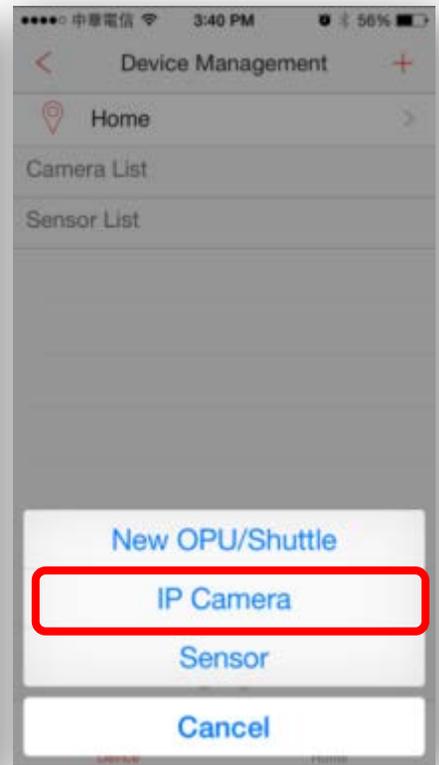


In the App sidebar menu, tap “Device Management”, tap “+” in upper-right corner, and then select “IP Camera”.

Notice: The device activation steps are only for adding new devices.



Follow the instructions shown and press “Next”.
Scan the QR code on the back of the camera.
The activation process takes around 1 to 2 minutes.

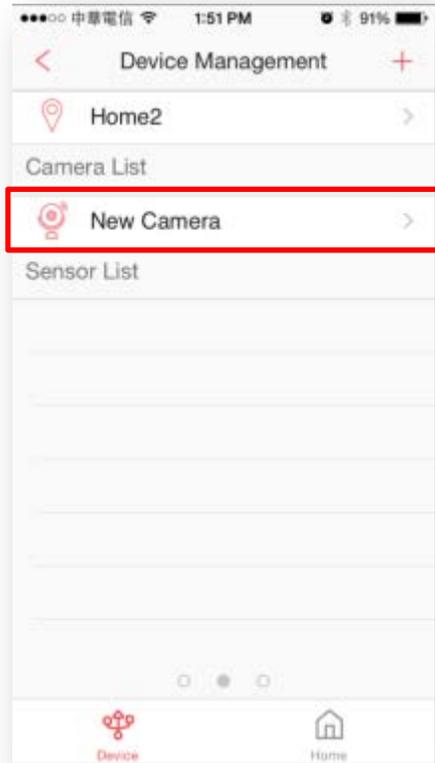


Once the camera has been successfully added, “New Camera has been added successfully” will appear on the App. You can find a New Camera icon in your Camera List.



The LED indicator will turn solid blue now.

Camera Setting

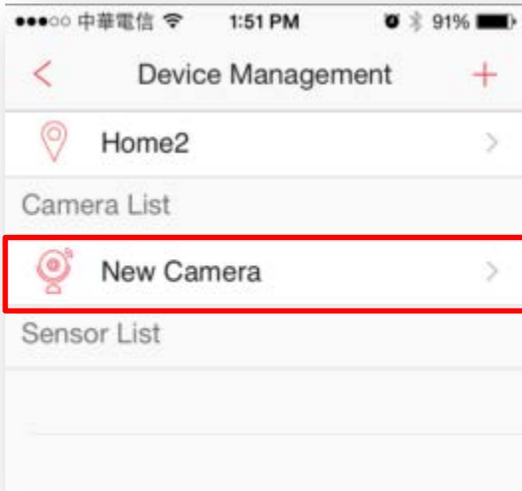


In “Device Management”, tap the camera that you would like to edit.

On the “Edit Camera” page, you can:



1 Change Display Name

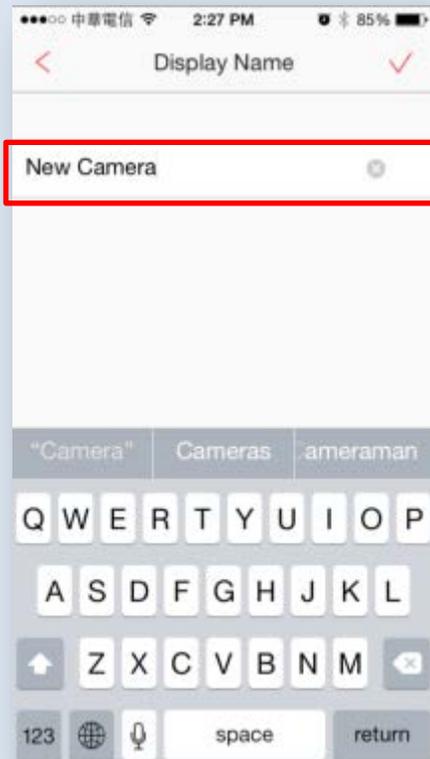

② Set Motion Detection Sensitivity




You can move the slider icon freely to set the Video Motion Detection Sensitivity from 0% to 100%.

③ Set Live Video Resolution



The Live Video Resolution can be set to HD, High or Medium.

④ Turn ON/OFF Camera

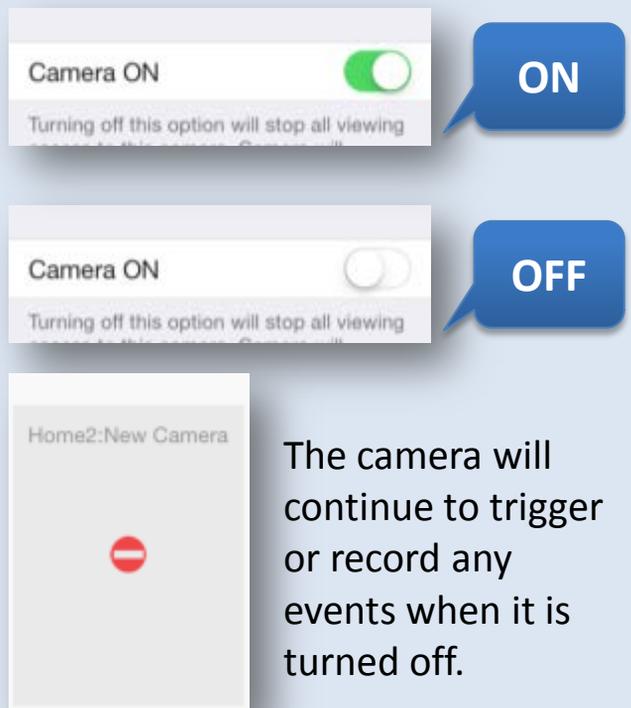

The camera will continue to trigger or record any events when it is turned off.

Set Continuous Recording



Micro SD card*

Before enabling the video Continuous Recording function, a Micro SD card has to be inserted into the Mini Cube HD Camera first.



Video Motion Detection level needs to be above 0% to trigger continuous recording.




With the above completed, in the "Edit Camera" page, you can turn on the Continuous Recording function to record motion-detected video clips of up to 3 minutes each.

Whether in Armed, Disarmed, or Stay Mode status, once motion is detected by the camera, Continuous Recording will be triggered.


Notification and Checking

Notification

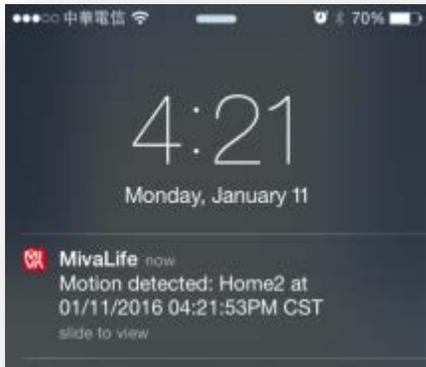

In Armed status, whenever motion is detected by the camera, the owner and authorized users will get a push notification of "Motion detected".


Video Checking

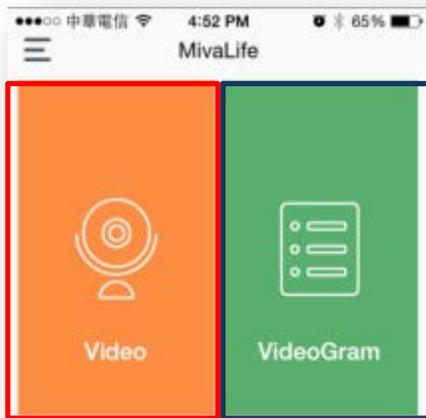

Check live video




Check the event-triggered recordings of 30 seconds

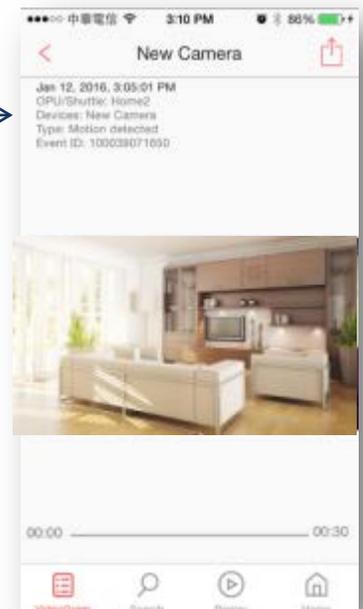


Replay Continuous Recording

1

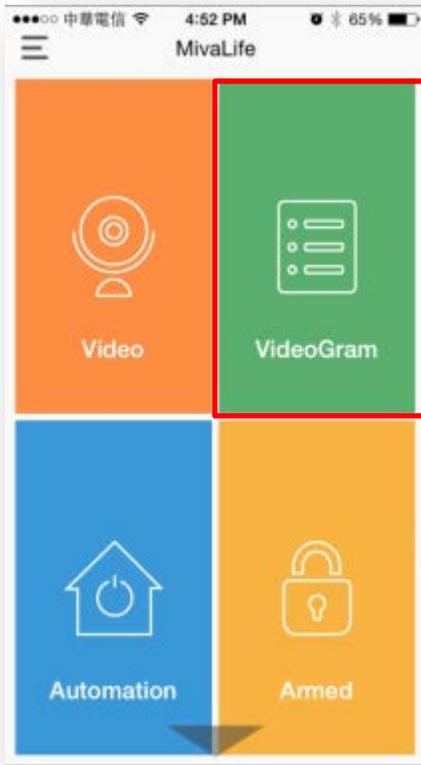

2

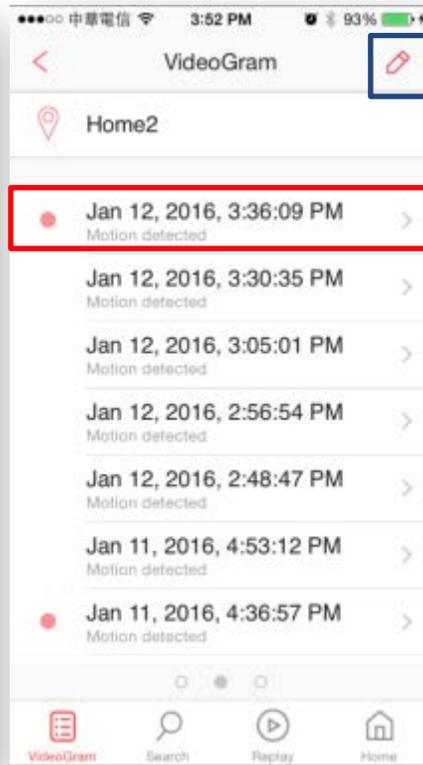


3



Find the “VideoGram” tile and select the event you want to check.

Tap the Replay icon  to watch an Event-Triggered/Motion-Detected Continuous Recording of up to 3 minutes each.

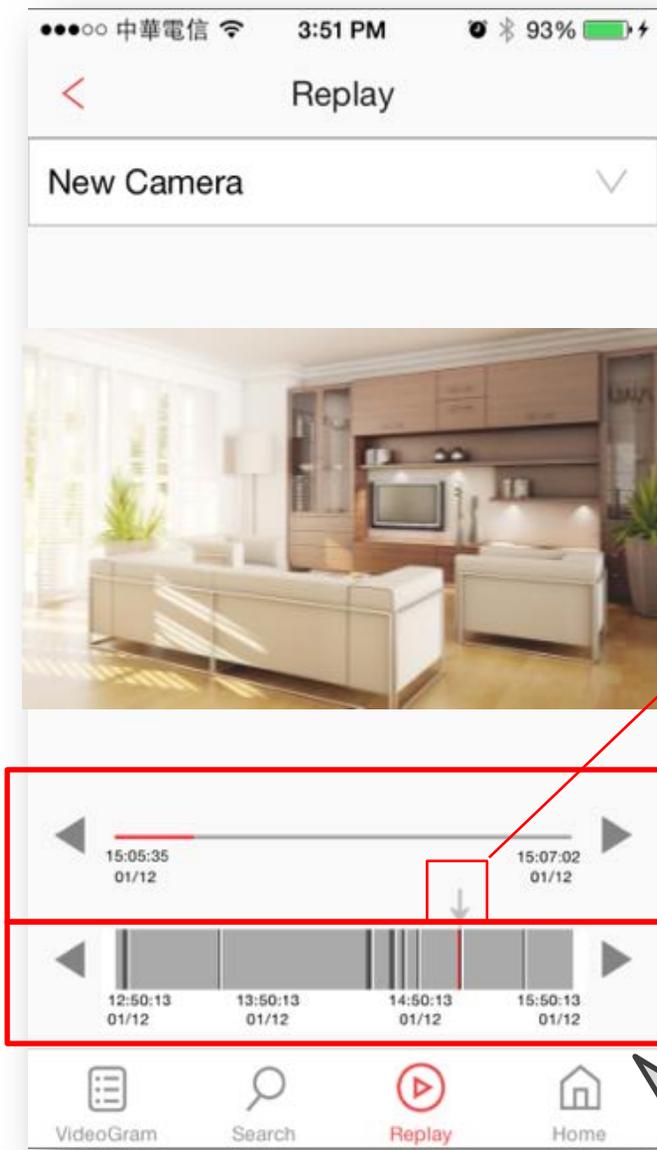

On the "Replay" page:

Time indicator.

Use the arrows here to move the time indicator to change the time from the period shown that you would like to watch.

Use the arrows here to change the date and time period.

Other information

LED Indicator

- Blue – Power on
- Purple – WLAN is connected



Reset



A hard reset will restore your device to factory default settings.

Press the reset button on the side of device with a pin till you hear a “Beep”.