



English - Description

The kettle is a device used for boiling water. The device is not suitable for boiling liquids other than water. The maximum capacity of the kettle is 1.8 litres.

1. On/off button / On/off indicator

2. Water level indicator

3. Analogue thermometer

4. Spout

5. Anti-scale filter

6. Lid

7. Handgrip

8. Base

Safety

General safety

• Read the manual carefully before use. Keep the manual for future reference.

• The manufacturer is not liable for damage caused by non-compliance with the instructions or by persons caused by non-observance of the safety instructions and improper use of the device.

• The device must not be used by children from 8 years and above and by persons with a physical, sensory, mental or cognitive disability, or lack of experience and knowledge if they are supervised or instructed on how to use the device in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised by a person who has the knowledge and experience to do so.

• Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.

• Do not use the device if it is damaged or defective. If the device is damaged or defective, replace the device immediately.

• The device is not suitable for medical purposes. Do not use the device for medical purposes.

• Do not immerse the device in water or other liquids. If the device is immersed in water or other liquids, do not remove the device from the water. Immediately remove the mains plug from the wall socket. If the device is immersed in water or other liquids, do not touch it.

• Only use the device in frost-free environments.

• Place the device on a stable, flat surface.

• Do not place the device on a hot plate.

• Do not cover the device.

• Make sure that there is sufficient space around the device to allow heat to escape and provide sufficient ventilation.

• Make sure that the device is not in contact with flammable materials.

• Keep the device away from heat sources. Do not place the device on hot surfaces or near open flames.

• Beware of hot parts. The accessible surfaces can become hot when the device is operating. The outer surface can become hot when the device is operating.

• Do not leave the device unattended during use.

• Do not move the device while it is switched on or is still hot. Remove the mains plug from the wall socket and allow the device to cool down completely.

• Only use the device with the supplied base.

• Only switch on the device when it is filled with water.

• Electrical safety

• CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

• The device is not suitable for use with a mains cable or mains plug that is damaged or defective. This product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.

• Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a workshop and cannot be caught accidentally or tripped over.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• Do not leave the device unattended while the mains plug is connected to the mains supply.

• To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.

• Disconnect the product from the mains and other equipment if a fault should occur.

• Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, replace the device immediately.

• Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.

• Connect the device to an earthed wall socket. If necessary, use an earthed extension cable or a suitable diameter.

• Do not immerse the device in water or other liquids.

• Do not move the device while it is connected to an external timer or separate remote-control system.</p

