
 



 


 


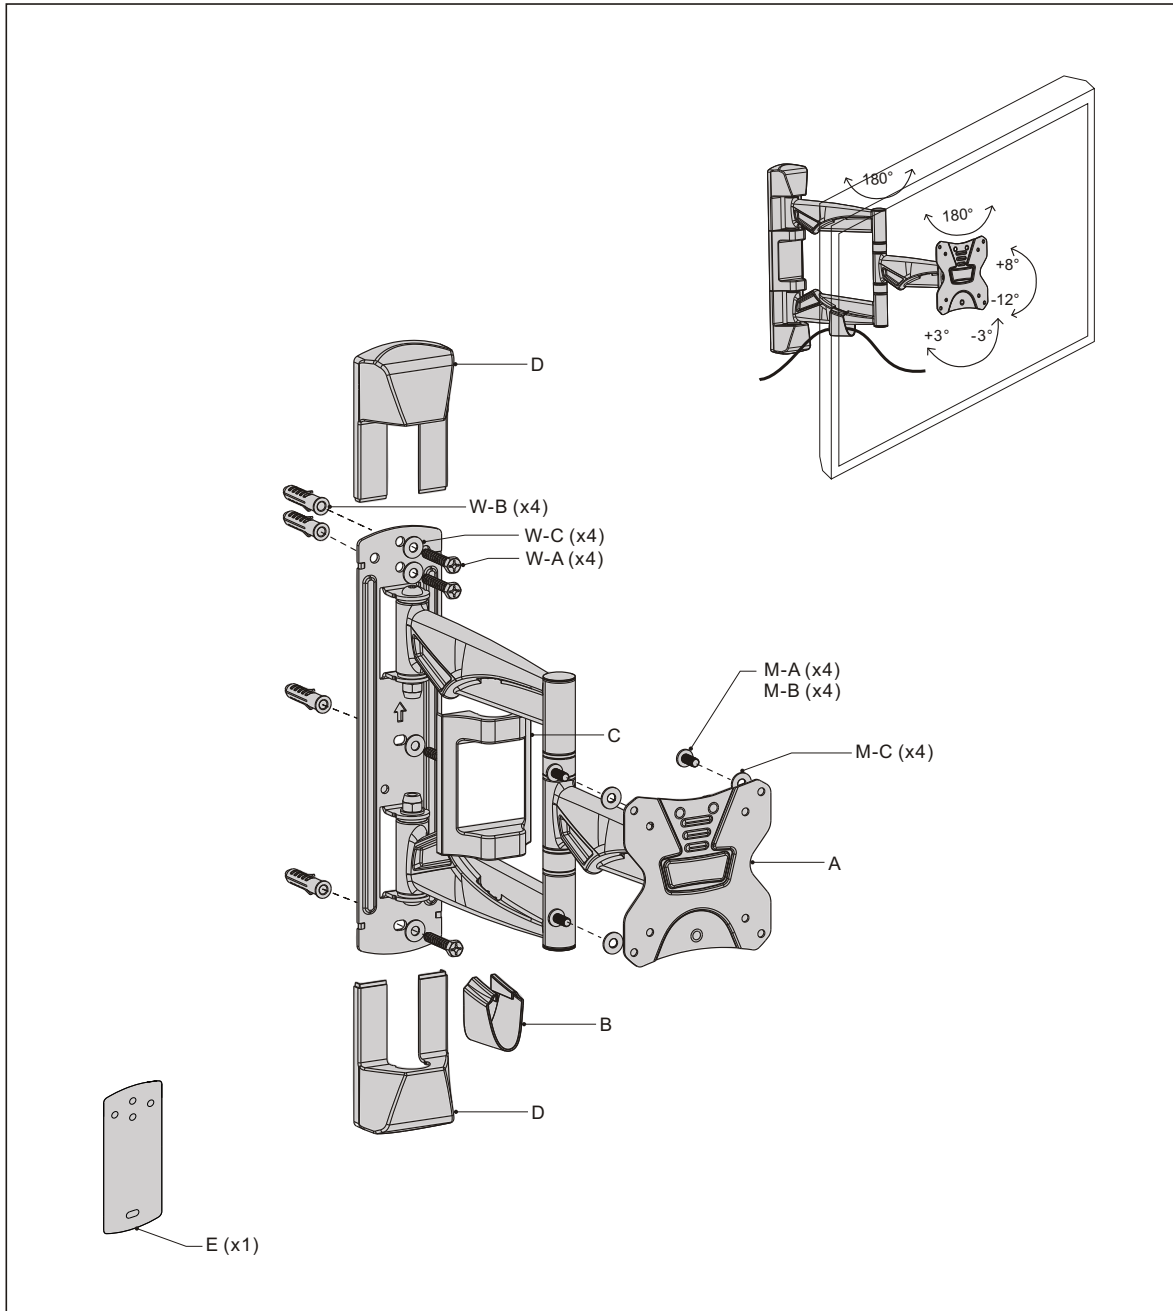



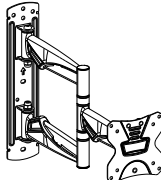


nedis

TVWM5510BK INSTALLATION MANUAL



 A(x1)	 B(x1)	 C(x1)	 D(x2)	 E(x1)	 M4x14(x4) M-A	 M5x14(x4) M-B	 D5(x4) M-C
 F(x1)	 G(x1)	 H(x1)			 W-A(x4)	 W-B(x4)	 W-C(x4)

