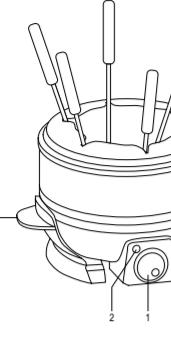


nedis

FCFO110EBK6
Electric fondue set**Description**

1. Temperatuur dial
2. Temperatuur indicator
3. Heating base
4. Handgrip
5. Fondue pot
6. Cover
7. Fondue fork

Safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and/or damage to the device.
- The device can be used by children from 8 years and above by persons with a physical, sensory, mental or motorial disability, or lack of experience and knowledge if they are supervised or instructed on how to use the device in a safe way or if they have been given adequate supervision or guidance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the device and the mains cable out of the reach of children younger than 8 years. Children shall not play with the device.
- Only use the device for its intended purposes.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is for domestic use only. Do not use the device for commercial purposes.
- Do not use the device near water or other vessels containing water.
- Make sure that the device does not come into contact with flammable material.
- Keep the device away from heat sources. Do not place the device on heat surfaces or near open flames.
- Do not clean the device.
- Place the device on a stable, flat surface.
- Place the device on a heat-resistant and splash-proof surface.
- Do not place the device on a hot surface.
- Do not use the device on abrasive fuels.
- Beware of hot parts. The surfaces marked with a caution symbol for hot surfaces are liable to become hot during use. The accessible surfaces can become hot when the device is operating.
- Be careful when touching the device. Use oven gloves if you need to touch the device during or shortly after use.
- The fondue pot becomes very hot during use. Do not touch the fondue pot. Only touch the handgrips when the fondue pot is hot.
- Do not leave the device unattended at any time with or directly after use.
- Do not move the device while it is switched on or is still hot. Remove the mains plug from the wall socket and wait until the device has cooled down.

Electrical safety

- CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN**
- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required. Disconnect the product from the mains and other equipment if a problem should occur.
 - Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
 - Before use, always check that the voltage indicated on the rating plate of the device is the same as the voltage on the power supply.
 - Always fully unscrew the mains cable and the extension cable.
 - Only use the appropriate connector to operate the device.
 - Do not move the device by pulling the mains cable. Make sure that the mains cable does not come into contact with the edge of a worktop and cannot be caught accidentally or tripped over.
 - Do not immerse the device, the mains cable or the mains plug in water or other liquids.

Initial use

- Clean the device. Refer to the section "Cleaning and maintenance".
- Fill the fondue pot with the required ingredients (vegetable oil, broth, cheese or chocolate).
- Place the fondue pot onto the heating base.
- Insert the mains plug into the wall socket.
- Set the temperature dial to the maximum temperature. The temperature indicator comes on.
- Wait for a few minutes until the temperature indicator goes off. The fondue pot has reached the required temperature.
- Note: When the device is switched on, the temperature indicator will come on and go off as the thermostat switches on/off to maintain the required temperature.
- Stir the fondue until it is fully blended.
- Pick the fondue pot from the heating base.
- Stir the food into the fondue.
- Stir the food into the fondue.
- Remove the fondue fork from the fondue.
- Remove the fondue pot, the cover and the fondue forks onto your fondue plate.
- After use, set the temperature dial to the minimum temperature.
- Remove the mains plug from the wall socket.
- Allow the device to cool down completely.

Cleaning and maintenance

- Warning!**
- Before cleaning or maintenance, switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
 - Do not use sharp objects or abrasives.
 - Do not immerse the device in water or other liquids.
 - Do not clean the accessories in the dishwasher.
 - Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
 - Clean the device after each use:
 - Remove any residues with a paper towel.
 - Clean the heating base with a soft, damp cloth. Thoroughly dry the heating base with a clean, dry cloth.
 - Clean the fondue pot, the cover and the fondue forks with a soapy water. Rinse the fondue pot, the cover and the fondue forks under running water. Thoroughly dry the fondue pot, the cover and the fondue forks with a clean, dry cloth.

- Beschrijving**
1. Temperatuurregelaar
 2. Temperatuurindicator
 3. Verwarmingsbasis
 4. Handgreep
 5. Fonduepot
 6. Deksel
 7. Fonduevork

- Veiligheid**
- Lees de gebruiksaanwijzing voor de handelingen handig op. Bewaar de handleiding voor later raadpleging.
 - De fabrikant is niet aansprakelijk voor gedragde of wettelijke aankondigingen of personen veroorzaakt door het niet naleven van de veiligheidsinstructies en door verkeerd gebruik van het apparaat.

- Het apparaat kan worden gebruikt door kinderen vanaf 8 jaar en door personen met een lichamelijke, zintuiglijke of motorische handicap of zonder de benodigde ervaring en kennis indien ze toestemming staan of instructies krijgen over hoe het apparaat moet worden gebruikt. Reiniging en onderhoud moet worden gedaan door kinderen die een speciale opleiding hebben gehad.

- Houd het apparaat en het netstekker buiten bereik van kinderen jonger dan 8 jaar. Kinderen mogen niet met het apparaat beschermen of de handgrepen gebruiken.

- Het apparaat is uitsluitend geschikt voor gebruik bij huishoudelijk gebruik. Gebruik het apparaat niet voor commerciële doeleinden.

- Gebruik het apparaat niet in de buurt van buitenshuis, doorchots, wasafwassen of andere voorzieningen die water bevatten.

- Zorg ervoor dat het apparaat niet in contact komt met brandbaar materiaal.

- Houd het apparaat uit de buurt van warmtebronnen. Plaats het apparaat niet op hete oppervlakken of in de buurt van open vuur.

- Zet het apparaat niet op voldoende ruime rondom het apparaat is voor het ontsappelen van warmte en voor voldoende ventilatie.

- Plaats het apparaat op een stabiele, vlokkelijke ondergrond.

- Gebruik geen houtskool of gelijksoortige brandbare stoffen.

- Pas op voor de hete oppervlakken. De oppervlakken zijn gekenmerkt met een waarschuwingssymbool voor hete oppervlakken worden hiertoe gebruik. De toegankelijke oppervlakken kunnen heet worden wanneer het apparaat in gebruik is.

- Wees voorzichtig wanneer u het apparaat aanraakt. Gebruik overhandscheinen indien u het apparaat tijdens of kort na gebruik moet aanraken.

- Zorg ervoor dat uw handen droog zijn voordat u het apparaat aanraakt.

- De fonduepot wordt zeer snel tijdens gebruik. Raak de heet fonduepot niet aan. Raak uitsluitend de handgrepen aan wanneer de fonduepot is volledig gekoeld.

- Laat het apparaat niet onverhoopt achter tijdens de gebruik.

- Verplaats het apparaat niet wanneer het is ingeschakeld of nog heet is. Verwijder de netstekker uit het stopcontact en wacht totdat het apparaat is afgekoeld.

- **Elektrische veiligheid**

- CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN**

- Dit product mag voor onderhoud alleen worden geopend door een erkend technicus om het risico op elektrische schokken te verkleinen.

- Koppel het product los van het stopcontact van een ander apparatuur als er zich problemen voordoen.

- Gebruik het apparaat niet als het netstekker beschadigd of defect is. Indien het netstekker of de netstekker beschadigd of defect is, moet het worden vervangen door een erkend servicecentrum voor de reparatie.

- Controleer of de temperatuurregelaar goed functioneert en dat de spanning op het typeplateau van het apparaat.

- Het apparaat moet niet worden gebruikt als de temperatuurregelaar niet goed functioneert.

- Wikkel het netstekker en het verlengsnoer altijd volledig af.

- Gebruik uitsluitend de stekker van de fonduepot.

- Gebruik een speciaal stopcontact voor de fonduepot.

- Verwijder de netstekker uit het stopcontact.

- Dompel het apparaat niet in water of andere vloeistoffen.

- Reinig de fonduepot met een speciale reinigingsstof.

- Reinig de fonduepot met een speciale reinigingsstof

